APPLICATIONS

Mazda 3

2004-2009

CT23MZ05





KIT FEATURES


- DIN Mount Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Bonus Display Replacement Pocket
- Retains Factory Display For Automatic Climate Controls


KIT COMPONENTS

A) Radio Housing • B) ISO Brackets • C) Trim Plate • D) Display Replacement Pocket • E) Display Retention Brackets • F) (2) 3/8" #10 Bolts and (2) #10 Nuts

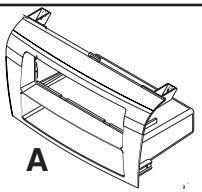

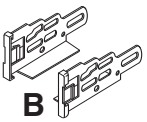









TOOLS REQUIRED:

Small Flat Blade Screwdriver/ Panel Removal Tool
• Phillips Screwdriver



TABLE OF CONTENTS

Dash Disassembly

- Mazda 3 2004-2009. 1

Kit Assembly

- Display Brackets/Pocket Assembly 2

- DIN Mount Radio Provision with Pocket 3

- ISO DIN Mount Radio Provision with Pocket 4

Final Assembly 5,6

****Note:***
Refer also to the instructions included with the aftermarket radio.

MAZDA 3 2004-2009

1 Disconnect the negative battery terminal to prevent an accidental short circuit.


2 Unclip and remove display trim panel above radio. **Tip:** Open glove box and start in middle of panel working towards drivers side first because last connection on far passenger side is a hook. **(Figure A)**

3 Remove (2) Phillips screws exposed at top of radio then unclip and remove radio. **Note:** *Display is attached to radio brackets and will be removed at same time as radio.* **(Figure B)**


4 Remove (2) Phillips screws on back of display trim panel securing display trim then unclip and remove. **(Figure B)**

Continue to display pocket assembly.


A

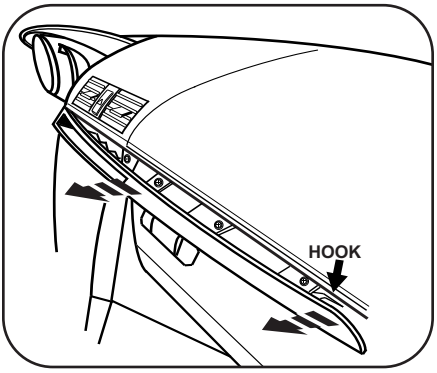

B

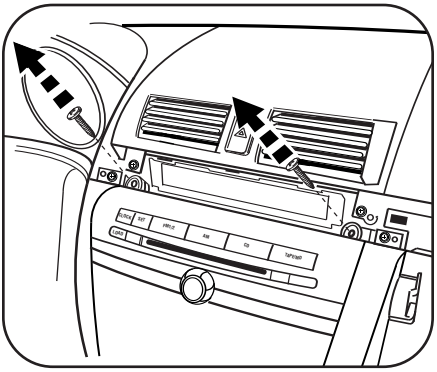

C

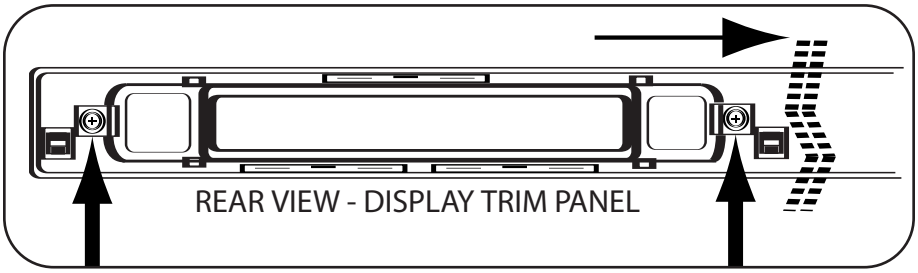

DISPLAY BRACKETS/POCKET ASSEMBLY
MAZDA 3 2004-2009


AUTOMATIC CLIMATE CONTROL VEHICLES

1 Using the (2) 3/8" #10 bolts and (2) #10 nuts attach the display retention brackets to the display unit.

2 Remove the (2) Phillips screws in the sub dash. **(Figure A)**

3 Secure the display unit into the sub dash using the screws removed in the previous step.

A

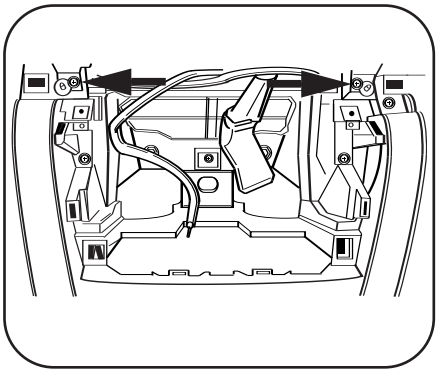


MANUAL CLIMATE CONTROL VEHICLES

1 Using the (2) Phillips screws removed in step 4 of Dash Disassembly secure the display replacement pocket to the back of the display trim panel. **(Figure B)**

Continue to kit assembly.

B

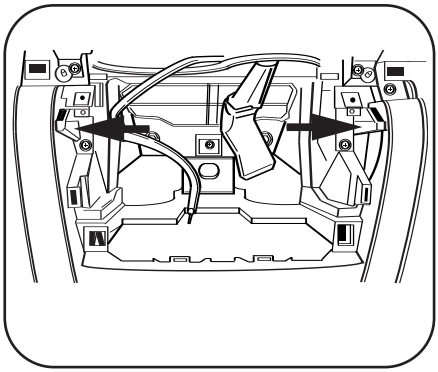

DIN MOUNT RADIO PROVISION

Note: Refer also to the instructions included with the aftermarket radio.


1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. **(Figure A)**

2 Slide the aftermarket radio unit into the cage and secure. **(Figure B)**


3 Snap the Trim plate into the Radio Housing. **(Figure B)**

Continue to final assembly.

A

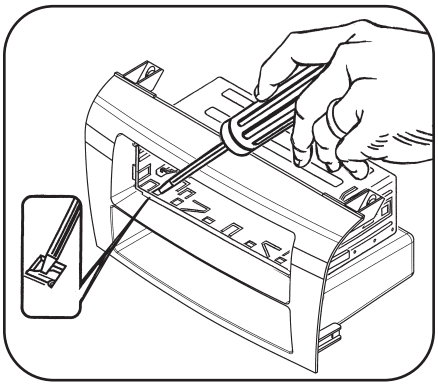

B

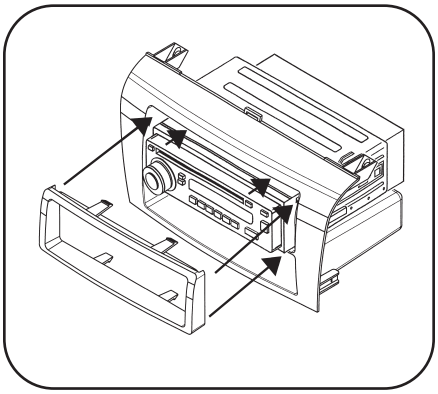

ISO DIN MOUNT RADIO PROVISION

Note: Refer also to the instructions included with the aftermarket radio.


1 Mount the ISO Brackets to the aftermarket radio using the screws supplied with the radio. **(Figure A)**

2 Slide the radio into the radio housing until it snaps into place. **(Figure B)**


3 Attach the trim plate supplied with the kit to the front of the radio housing assembly. **(Figure B)**

Continue to final assembly.

A

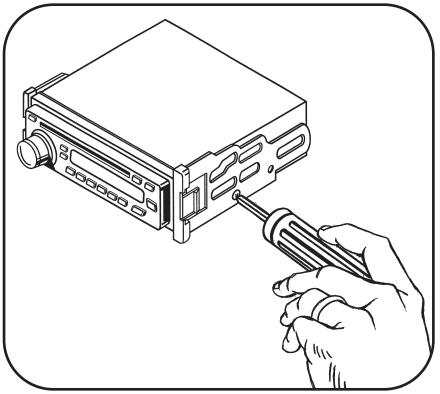


B

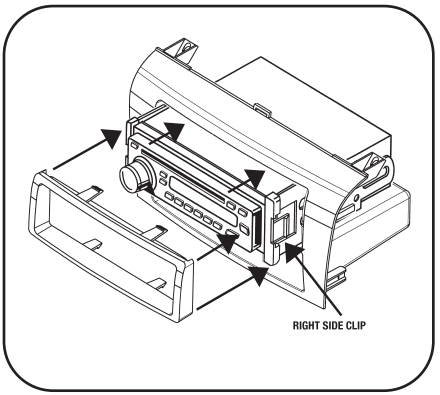

Note: *When inserting into the sub dash be aware of the locations pointed out in* ***Figure B***
If t does not snap in correctly the result will be a noticeable gap on each side of the installation kit. **(Figure C)**

B

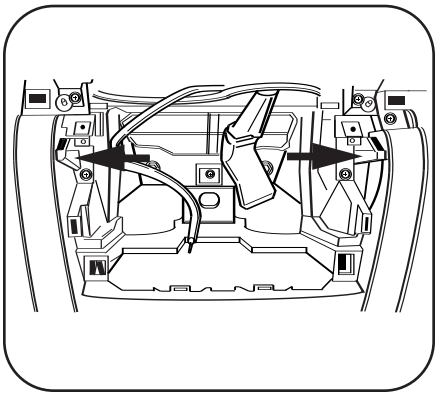

C

